#### WARNINGS

- ·Attempting to repair this unit is not recommended and may void its warranty.
- •Missing or altered serial numbers automatically void the warranty. For your own protection, be sure the serial number labels on the unit and exterior box are intact.

#### ONE-YEAR LIMITED WARRANTY

Manufacturer warrants unit to be free from defects in materials and workmanship for a period of one (1) year from the date of purchase to the original purchaser and is not transferable. This warranty does not include damage resulting from accident, misuse, abuse, alteration, or incorrect current or voltage. If unit becomes defective within warranty period, Tech 21 will elect to repair or replace it free of charge. After warranty period expires, manufacturer will repair defective unit for a fee.

#### PROOF OF PURCHASE IS REQUIRED FOR ANY REPAIR

For residents of the U.S. and Canada, please call Tech 21's main headquarters for shipping instructions and a Return Authorization Number. Tech 21 will not accept packages without prior authorization, pre-paid freight (UPS preferred), and proper insurance.

#### **FOR PERSONAL ASSISTANCE & INQUIRIES**

Contact Tech 21 weekdays from 9:00 AM to 5:00 PM, Eastern Standard Time.

#### **DESIGNED AND MANUFACTURED IN THE U.S.A.**

 $\epsilon$ 

Fill in the following information for future reference:

Model Number	
Serial Number	
Dealer's Name	
Dealer's Address	
Date of Purchase	



 
T: 973-777-6996

E: info@tech 21nyc.com


W: www.tech21nyc.com

© 2004 Tech 21

# POWER ENGINE 300<sup>™</sup> TECH 21·NYC



## POWER ENGINE 400<sup>™</sup> TECH 21·NYC

 

#### **TECH 21, THE COMPANY**

Tech 21 was formed by a guitarist possessing the unusual combination of a trained ear and electronics expertise. In 1989, B. Andrew Barta incorporated Tech 21 and made his invention commercially available to players and studios around the world. His highly-acclaimed *SansAmp™* pioneered Tube Amplifier Emulation in professional applications for recording direct and performing live, and created an entirely new category of signal processing. While there have since been many entries into this niche, SansAmp continues to maintain its reputation as the industry standard.

After developing a full line of SansAmp models, Tech 21 expanded its offerings to include effect pedals; a compact, battery operable MIDI footcontroller, the *MIDI Mouse*; as well as "traditional" style amplifiers for guitar and bass. Each product is thoughtfully and respectfully designed by B. Andrew Barta himself with the player in mind.

Our goal is to provide you with flexible, versatile tools to cultivate, control, refine and redefine your own individual sound. Tech 21 takes great pride in delivering consistent professional quality sound, studio to studio, club to club, arena to arena.

#### **POWER ENGINE SERIES, AN OVERVIEW**

The Power Engine Series concept began as a simple, all-purpose 1x12 open-back powered cabinet. The goal, initially, was to provide pure, transparent sound to amplify our own line of SansAmp Tube Amplifier Emulators after having to address the most often asked question, "Which amplifier should I use with my SansAmp?" During the engineering process, the Power Engine evolved into a stand-alone "preamp amplifier" that could be used with any direct recording device or preamp from any manufacturer. The Power Engine was also designed to complement our Trademark Series of traditional amplifiers for players whose volume requirements vary from gig to gig.

The next most often asked question was for those with SansAmp rackmount models: "Which power amp should I use?" It became apparent we should build our own *instrument* power amplifiers for large-venue capacity.

Both formats, 300-watt/4-Ohm mono or 400-watt/8-Ohm stereo, fit into a 2U rack space. The oversized power supply with a toroidal transformer delivers pneumatic punch with a natural transient response for tone that is uncolored and unaltered. These costlier transformers are lighter in weight and reduce stray magnetic fields that cause interference and hum.

Each model is touring tough and super-reliable. Top-quality Toshiba power transistors and a heat-sensor equipped cooling fan furnish non-stop, full RMS-watt power, rather than pulse or peak power.

### IMPORTANT SAFETY INSTRUCTIONS. READ AND SAVE THESE INSTRUCTIONS. HEED ALL WARNINGS.



This symbol, wherever it appears, alerts the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, wherever it appears, alerts the user to important operating and maintenance instructions in the accompanying literature. Read the manual.

### This unit is powered by potentially hazardous voltage. Therefore, observe the following safety precautions:

- 1. Read and follow all instructions before using product.
- 2. Do not use product near water (such as near a bathtub, washbowl, kitchen sink, swimming pool, in a wet basement, etc.).
- **3.** Unit should be located so that its location or position does not impede the flow of air through the ventilation openings.
- **4.** Product should be located away from heat sources such as radiators, heat registers, or other products, including amplifiers, that produce heat.
- 5. Product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.



CAUTION
RISK OF ELECTRICAL SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



ATTENTION

RISQUE D'ELECTROCUTION

NE PAS OUVRIR

ATTENTION: POUR REDUIRE LES RISQUES D'ELECTROCUTION NE PAS ENLEVER LE COUVERCLE. AUCUNE PIECE INTERNE N'EST REPARABLE PAR L'UTILISATEUR. POUR TOUTE REPARATION. S'ADRESSER A UN TECHNICIEN QUALIFIE.



VORSICHT
ELEKTRISCHE SCHLAGGEFAHR
NICHT OFFNEN

VORSICHT: ZUR MINIMIERUNG ELEKTRISCHER SCHLAGGE-FAHR NICHT DEN DECKEL ABNEHMEN, INTERNE TEILE KONNEN NICHT VOM BENUTZER GEWARTET WERDEN, DIE WARTUNG IST GUALIFIZIERTEM WARTUNGSPERSONAL ZU UBERLASSEN.

- **6.** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- **7.** Do not allow objects or liquids to penetrate the enclosure through openings.
- **8.** During heavy use, chassis may get hot to the touch. Handle with care.
- 9. Protect unit from strong impact.
- **10.** Unplug product before cleaning. Never spray liquid cleaners into the amp: wipe with a clean, lint-free cloth to remove dirt and film.
- **11.** Only use attachments/accessories specified by the manufacturer.
- 12. This product should be used only with a

cart or stand that is recommended by the manufacturer. When a cart is used, use caution when moving the cart/product combination to avoid injury from tipping over.

- 13. Amplifiers may be capable of producing high volume levels that could cause permanent hearing loss or damage, if the exposure to such levels is prolonged. Such damage is progressive and irreversible! If you experience any hearing loss or ringing in the ears, consult an audiologist.
- 14. Unplug unit during lightning storms or when unused for long periods of time.



15. This unit must be earth grounded. To reduce the risk of electric shock, NEVER remove or otherwise attempt to defeat the ground pin of the power cord. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

WARNING: To avoid the risk of fire, electric shock or injury, do not expose this unit to rain or moisture. Do not remove the chassis from its cabinet, or remove metal covering from chassis parts. Removing the chassis from its cabinet exposes extremely dangerous high voltages. There are no user-serviceable parts inside. Hazardous voltages are present inside the chassis. Refer all servicing to qualified personnel.

CAUTION: Never modify the power cord. If original power cord becomes damaged, frayed, or has exposed wires, replace immediately with same rating and gauge, or higher. Replacements are commercially available or you can contact Tech 21 directly.

WARNING: Attempting to repair this unit is not recommended and may void its warranty, NOTE: In the U.S. and Canada, servicing is performed at factory only. In other countries, please refer repairs to the local Tech 21 authorized distributor.

#### **FUSE**



Fuse holder is located inside A/C cord receptacle. You must unplug and remove power cord to change fuse. Replace with similar type and same

value: Power Engine 300: Power Engine 400: 100V. 117V units: use F 6A L 100V. 117V units: use F 8A L 230V. 240V units: use F 3.15A L 230V. 240V units: use F 4A L

#### **PRECAUTIONS**

- 1. Improper wiring may result in serious operating difficulties.
- 2. Do not short the ground lead of a speaker output cable to the input signal ground. This may form a ground loop and cause oscillations.



- 3. NEVER connect the output to a power supply, battery or power main or electric shock may occur.
- 4. Tampering with or performing unauthorized circuitry changes may be hazardous and void warranty.
- 5. Do not operate if the Clip LED is constantly flashing.
- 6. Never operate the amplifier with less than the minimum load impedance or premature clipping and speaker damage may result.

#### **INSTALLATION & MOUNTING**

- 1. During installation, be sure the unit is not connected to a power source, the power switch is in the "off" position, and Level control(s) is/are at minimum (7 o'clock).
- 2. If rackmounting, you will need a standard 19" rack case (not included).
- 3. Rackmounting holes are ISO standard spacing. Four 10-32x.5" philip machine screws are typically used to secure the amplifier.

- 4. Considering its weight, we recommend mounting unit on bottom of rack case.
- 5. If there isn't enough clearance at the bottom of the rack case, detach the rubber feet simply by removing the screws.
- 6. If there's too much clearance (with or without rubber feet) and you have a gap, provide additional support to the rear of the unit (such as larger feet, wooden shims, etc.)
- 7. DO NOT BLOCK AIR VENTS. Allow a minimum of 4" of airspace at the rear.

 
#### STARTING UP

#### **MAIN POWER**



- Connect the AC power cord to the Power Engine and to main power source. NOTE: The 3rd prong of the plug (ground) is an important safety feature. DO NOT attempt to defeat the ground by using an adapter or removal.
- You will need input wiring cables and output wiring cables (not included) to connect to your preamp and speaker cabinet(s).
- Be sure all levels in the signal chain, including the Power Engine, are at minimum.
- Turn on the Power switch on the front of the unit, which will glow red.
- Turn up the level of your audio source approx. 3/4.
- Gradually turn up the Level control(s) on the Power Engine to approx. 3/4.
- Adjust the level of our audio source accordingly to normal amount.

#### **FRONT PANEL**



POWER ENGINE **POWER ENGINE 400** 

#### LEVEL(s)

Adjusts the overall volume. We recommend starting with Level(s) approx. 3/4 up and then adjusting to desired amount.

#### SIGNAL LED

Green status indicator for presence of an input signal. It will flash when the signal passes to your speakers.

 
#### **CLIP LED**

Red status indicator for presence of input clipping distortion. It will flash when at maximum output. Lower bass frequencies may cause occasional flashing, for which there is no need for concern. Higher frequencies causing consistent flashing, indicates there is excessive distortion, which could result in damage to high frequency drivers, but not the amp itself. **NOTE:** If the Clip light(s) remain on when there is no signal, it may indicate there's a problem. Contact Tech 21 for technical assistance to determine how to proceed.

#### **POWER SWITCH** with built-in status indicator

Turns on the Power Engine when right side is pushed in and will glow red when engaged. Be sure power amp connections are secure and check the AC power source prior to engaging the Power Switch.

#### **BACK PANEL**



#### 1/4" INPUT\*

Receives unbalanced input signals.

#### **XLR INPUT\***

3-pin female XLR balanced input for professional applications. Reduces hum and allows use of longer cables without signal degradation.

\*NOTE: If you have the choice, we recommend utilizing the XLR input of the Power Engine. Additionally, do not use both inputs at the same time.

#### **GROUND LIFT**

Disconnects (isolates) the ground circuits between the XLR Output of the Power Engine and the mixer to eliminate hum caused by ground loops. We recommend starting with the ground lifted. If necessary, connect the ground by pushing the button in.

#### **XLR OUTPUT**


3-pin female XLR balanced output for professional applications to connect to a studio mixer or P.A. Reduces hum and allows use of longer cables without signal degradation. It is directly connected to the Input but unaffected by the Level control(s). If you require more wattage for large venues, our XLR Output allows you to endlessly chain Power Engines together.

#### PARALLEL SPEAKER OUTPUTS

1/4" speaker jacks. **NOTE:** Turn off Power Engine **before** connecting your speakers. For Power Engine 300: Do not use speakers rated at less than 4 Ohms, as it could cause undesirable distortion or potentially overheat the Power Engine. Speakers rated at a higher value will result in loss of power.

For Power Engine 400: Do not use speakers rated at less than 8 Ohms, as it could cause undesirable distortion or potentially overheat the Power Engine. Speakers rated at a higher value will result in loss of power. NOTE: You cannot run the Power Engine 400 in bridge/mono mode. If you require less wattage for smaller venues, you can choose to use only one side.

#### HOOK-UP DIAGRAM

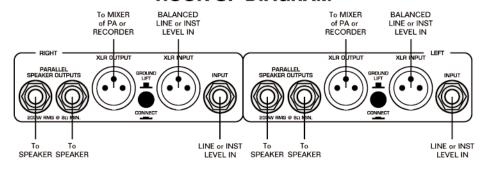

#### POWER ENGINE SPECIFICATIONS

Note: With on-going product development and improvements, specifications and/or the cosmetic appearance of this unit may change without prior notice.

Model Number:	PW300	PW400
XLR Input Impedance:	≥ 3.3KOhm	≥ 3.3KOhm
1/4" Input Impedance:	≥ 10KOhm	≥ 10KOhm
Nominal Input Level:	-10dBm	-10dBm
Optimal Output Load:	4 Ohms	8 Ohms per side
RMS Continuous Power Output:	300W RMS @ $4\Omega$ min load 200W RMS @ $8\Omega$	200W RMS @ 8Ω min/side

150W RMS @ 16Ω 150W RMS @ 16Ω XLR Output Level: same as input same as input

100V. 117V. 230V. 240V

AC Input Power (factory set):

50/60 Hz Cycles:

NOTE: Each unit constructed for specific voltages. AC power cannot be switched.

17"w x 3.5"h x 10"d Unit Dimensions: Overall (with ears, feet and handles): 19"w x 3.8125"h x 11.5"d Weight: Power Engine 300: 22.3 lbs. Power Engine 400: 26.25 lbs.

#### **Optional Speaker Cabinets:**

- •4x12TM 4x12, 320-watt, 8-Ohm closed-back cabinet with special design Celestion® speakers, available with black grill and silver piping or wheat grill and white piping. Either style is available in slant or straight front formats.
- •B410 4x10, 400-watt, 8-Ohm rear-vented bass cabinet with cast-frame, custom-designed speakers; chrome-plated steel grill.
- •B115 1x15, 300-watt, 8-Ohm bass cabinet with custom-designed Eminence® Neodymium speaker; chrome plated steel grill.

Replacement parts (i.e., knobs, logo plate, handles, ears, hardware, etc.) are available through your authorized dealer, distributor or directly from Tech 21.